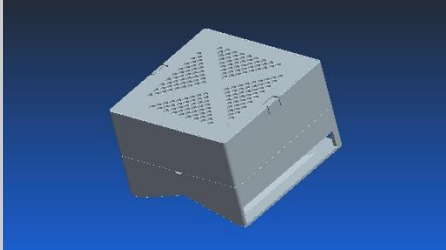 
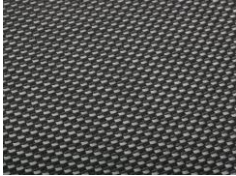 



| | |
|---|--|
| Product Specifications: | |
| <p>Free-standing addition to vehicle – fed by standard 12V power (plug supplied):</p> <p>Dimensions:</p> <ul style="list-style-type: none"> • 159x159x104 - wxdxh (mm) • Standard lead length – 2m |  |
| | |
| In The Box: | |
| <ul style="list-style-type: none"> • 1 x FreshBox™ • Single ‘non-slip’ panel for easy setting • Warranty and CE Documentation • Filter re-ordering information |  |
| General Guidance: | |
| <p>When entering an area of known high air pollution:</p> <ul style="list-style-type: none"> • Close the windows in the car • Turn recirculate ON in your vehicle • Activate the FreshBox™ |  |
| <p>When clear of heavy traffic or a tunnel open the windows to allow fresh air to flow through</p> | |
| Filter Changing Regime: | |
| <p>The frequency that you will need to change the filter depends on your usage – below are some sample examples, based on early testing:</p> <ul style="list-style-type: none"> • Tube driver – once a month • Bus driver – once quarterly • Typical central London taxi driver – once every six months • Delivery driver in central London – once every six months • General usage – annual replacement only <p>Details of re-ordering are ‘In The Box’ – bespoke fitting options are available</p> | |